



## Installing PSP 3000 Trigger Buttons

### Tools used in this guide

- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)

Steps for replacing the trigger buttons for the Sony PSP-3000.



## Step 1 - Battery

- Start on the back of the device. This is where the battery and the battery cover are located.



## Step 2

- The battery door is located on the left side when looking at the PSP from the back. Lift open the battery door to reveal the battery. Remove the battery cover.
- Using your finger, pry up the top edge of the battery. Continue to pull the top edge until the bottom of the battery is free.
- Remove the battery.






## Step 3 - Casing

- Using a spudger or fingernail, peel back the warranty sticker that is behind the battery.



## Step 4

- Unscrew all four screws from the back of the PSP.
  - Two from behind the battery.
  - Two on the right side of the PSP.

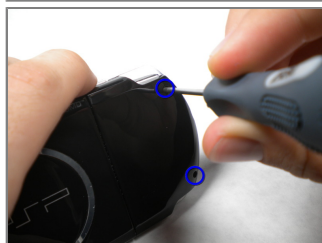



### Step 5

- Unscrew two screws from the top of the PSP.



### Step 6

- Remove a single screw from the bottom surface of the PSP.



### Step 7

- Starting from the 'R' trigger, slide the spudger in between the outer casing the the PSP, and gently pry off the casing.
- Remove the front casing completely.



### Step 8 - LCD Screen

- Push the homebar to the right to release the tab on the right side of the LCD screen.
- DO NOT completely remove the homebar, as it is still connected by ribbon cables.









### Step 9

- Slowly begin to lift the LCD screen off the PSP from the top edge.
- Again, the LCD screen is attached by ribbon cables, so do not remove it completely.



- Orientation of PSP flipped in photo

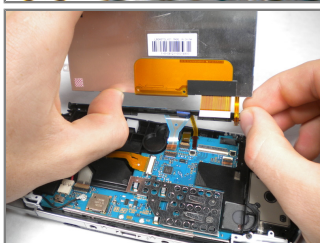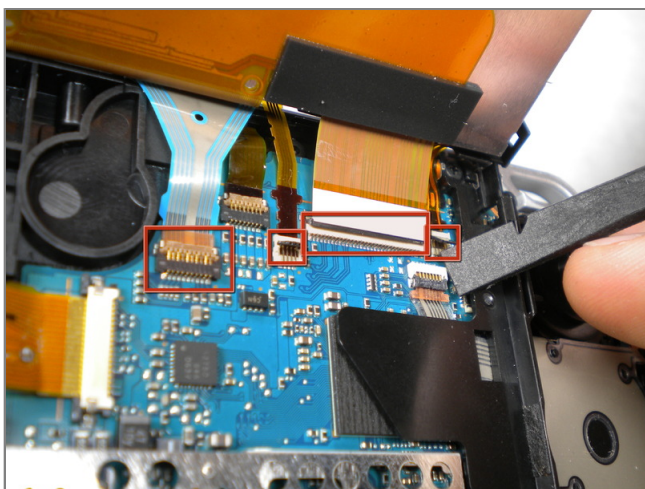


### Step 10

- Using a spudger or fingernail, flip the small brown locks on the four ribbon cable connectors up.
- Pull all four ribbon cables out, and remove the LCD screen and homebar from the PSP.




### Step 11

- Remove the metal tab the lies above the LCD.
- Upon reassembly, make note that the stamped lettering faces down, and the large tab fits just above the motherboard to the right of the left trigger.

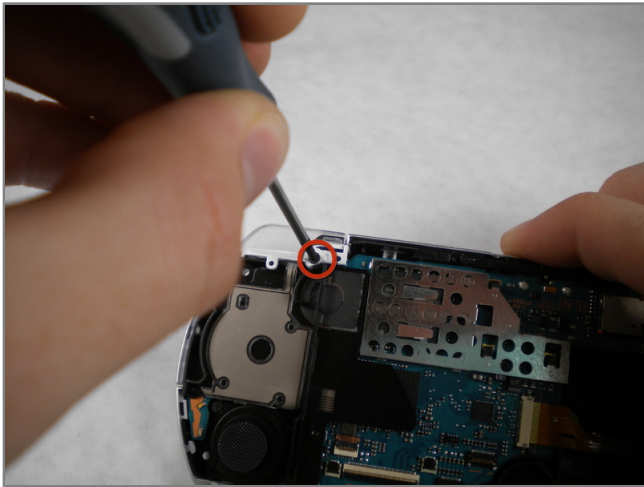


### Step 12 - Trigger Buttons

- Remove the screw securing 'L' trigger to the PSP.

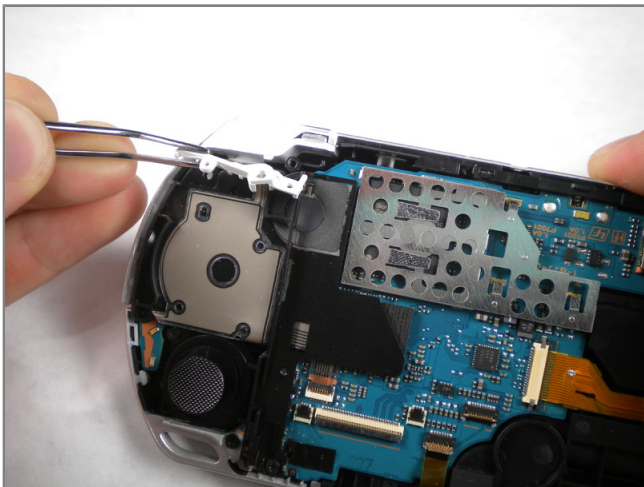


### Step 13

- Remove the white plastic piece that holds the 'L' trigger in place.

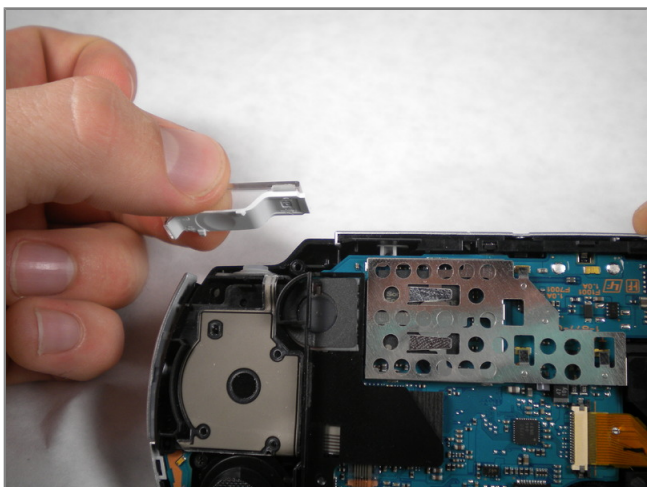


## Step 14

- Remove the 'L' trigger from the PSP.

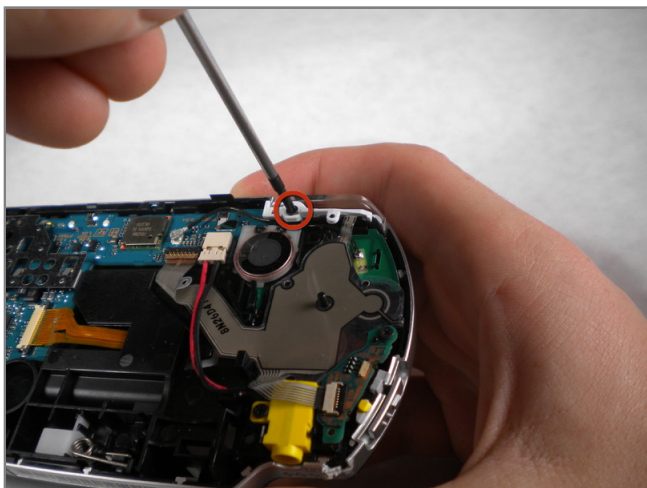

## Step 15


- Remove the screw securing 'R' trigger.

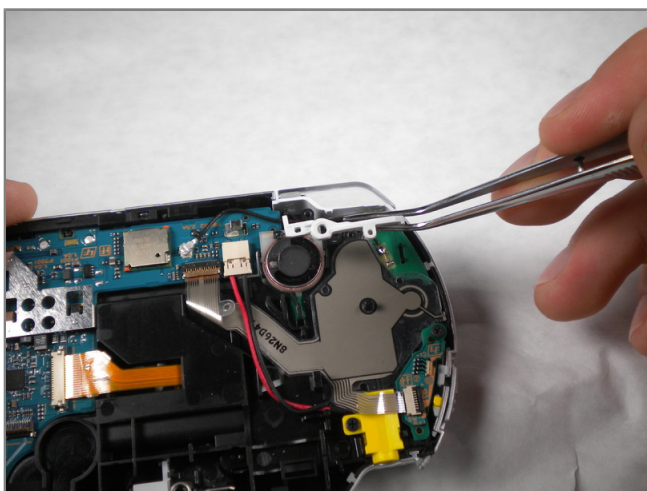

## Step 16

- Remove the white plastic piece that holds the 'R' trigger in place.



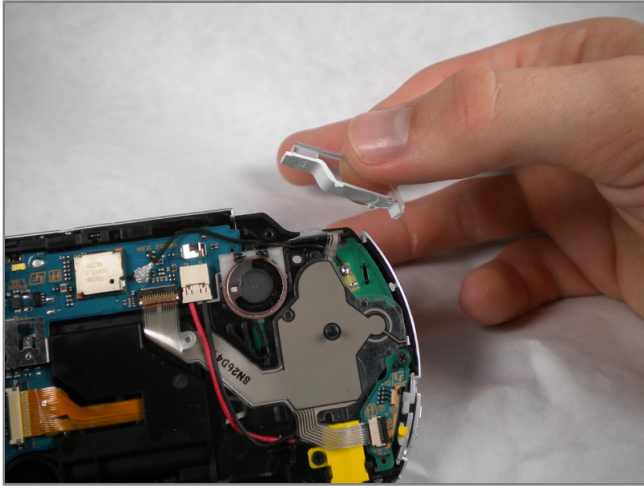

### Step 17

- Remove the 'R' trigger from the PSP.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on Dec 14, 2010.